
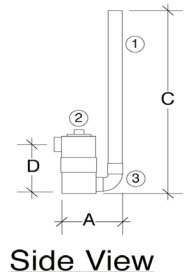
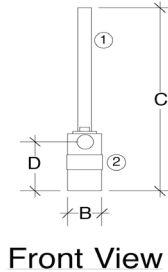


EVO/3VO Condensate Neutralizer Technical Information



Sufficient volume of neutralizing agent is contained in the neutralizer to provide for 2000 hours of proper operation of a fully condensing appliance. pH should be checked annually and neutralizing agent replaced when the pH does not reach 6.5 or higher. Neutralizing agent used is 1/2"–3/4" common limestone aggregate, P/N HWT 00101. pH Testing kit available, P/N MSC 33811.

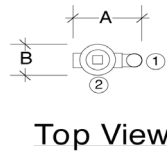



Companion Condensate Neutralizer

Description	Model	MBH	GPH	Lbs Media	A	B	C	D
Vertical model for EVO 129–199.1	CNK 90001 V	200	2.2	3.5	8"	3.5"	20"	6"
Vertical model for EVO 299–599	CNK 90001 VD	630	6.9	8	8"	3.5"	20"	12"

Note: These condensate assemblies can be used for Companion units HW79–HW599

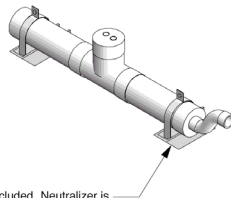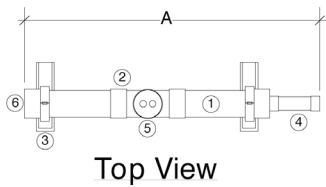

Mounting base is not included. Neutralizer is intended to be mounted on EVO rack system.

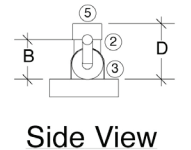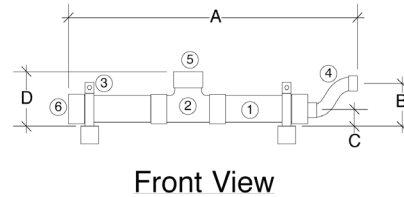

EVO 129–599 Condensate Neutralizer

Description	Model	Tees/Caps	MBH	GPH	Lbs Media	A	B	C	D
Condensate Neutralizer for 1 EVO Micro	CNK 90001 M	1	200	2.2	7.0	30"	4"	2"	6"
Condensate Neutralizer for 1 EVO Duo	CNK 90001 D	1	630	6.9	8.5	30"	4"	2"	6"
Condensate Neutralizer for 2 EVO Micros	CNK 90002 M	1	400	4.4	14.0	52"	4"	2"	6"
Condensate Neutralizer for 2 EVO Duos	CNK 90002 D	1	1260	13.8	16	52"	4"	2"	6"
Condensate Neutralizer for 3 EVO Micros	CNK 90003 M	2	600	6.6	21.0	75"	4"	2"	6"
Condensate Neutralizer for 3 EVO Duos	CNK 90003 D	2	1890	20.7	23.5	75"	4"	2"	6"
Condensate Neutralizer for 4 EVO Micros	CNK 90004 M	2	800	8.8	28.0	100"	4"	2"	6"
Condensate Neutralizer for 4 EVO Duos	CNK 90004 D	2	2520	27.7	31.0	100"	4"	2"	6"
Condensate Neutralizer for 5 EVO Micros	CNK 90005 M	3	1000	11	35.0	126"	4"	2"	6"
Condensate Neutralizer for 5 EVO Duos	CNK 90005 D	3	3150	34.6	37.5	126"	4"	2"	6"
Condensate Neutralizer for 6 EVO Micros	CNK 90006 M	3	1200	13.2	42.0	144"	4"	2"	6"
Condensate Neutralizer for 6 EVO Duos	CNK 90006 D	3	3780	41.5	45.0	144"	4"	2"	6"



Note: These condensate assemblies can be used for EVO Micro units HW129–HW199, and EVO Duo units HW299–599. The number of sanitary tees and caps increase with the size of the Neutralizer.



UL 795-2011/CSA 3.4
ANSI Z21.13-2011/CSA 4.9-2014
UL 795-2011/CSA 3.4
SCAQMD 1146.2

EVO/3VO Condensate Neutralizer

Technical Information (continued)

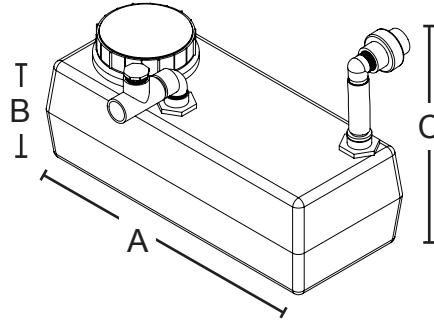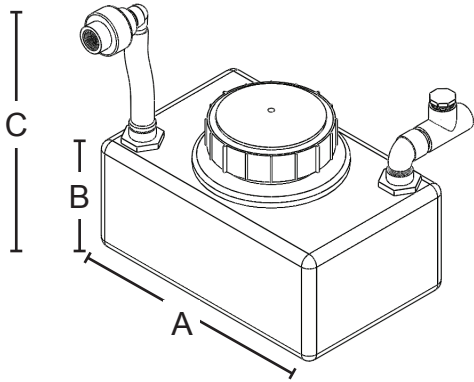

3VO 750–4000 Condensate Neutralizer

Description	Model	MBH	GPH	Lbs Media	A	B	C
Condensate Neutralizer for 3VO 750–1000	CNK 92001	1000	11	10	14"	6"	9"
Condensate Neutralizer for 3VO 1500–4000	CNK 92002	4000	44	40	22"	7.1"	9.7"

Note: These condensate assemblies can be used for 3VO units HW750–HW4000

